



 
Innovate The Future

INSTRUCTION MANUAL
20" WALL FAN
Model:DWF 508R




**Please read the instruction carefully before using and keep it
for the future reference.**

Model : DWF 508R
Voltage : 220-240V~
Frequency: 50-60Hz
Power : 85W

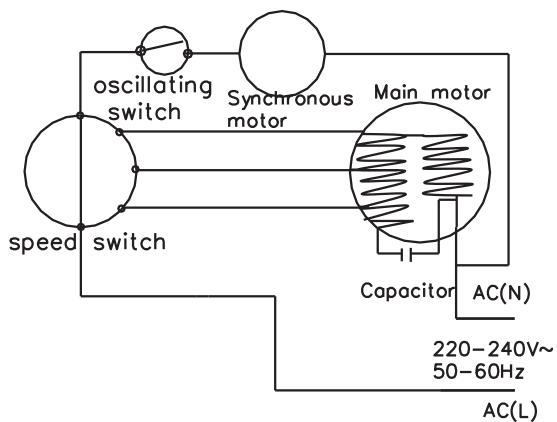

Part Name:

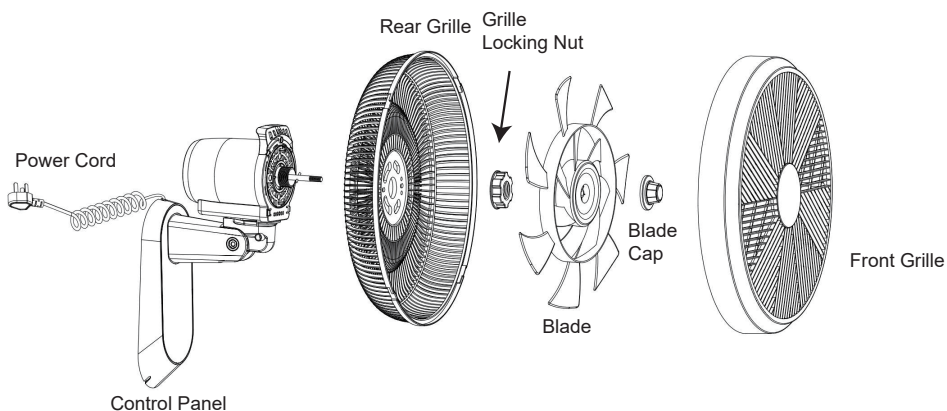

Assembly Instruction

Wall Mounting The Fan

1. Drill 3 holes on the wall with a distance complied with the hole on the hang bracket.
2. Insert plastic wall plug into hole.
3. Mount the hanging bracket (2) on the wall with three screws (1) provided (fig1)
4. Hang the motor and control assembly (3) with the bracket fix (11) onto the hanging bracket. (fig2)
5. The fan needs to be installed with blade first so that the blades are more than 2.3m above the floor.
Do not use the fan before assembly.

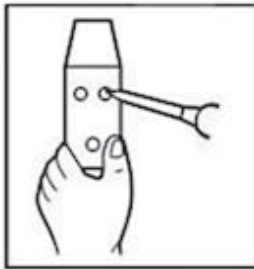
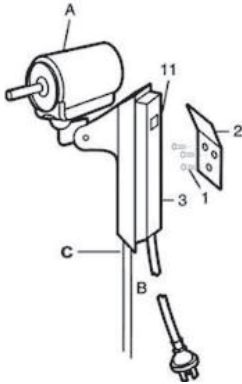


FIG 1


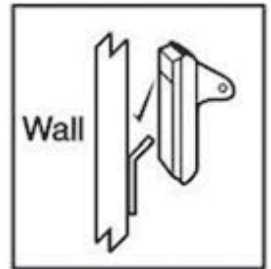


FIG2

Assembling The Fan

1. Loosen the rear guard securing ring (5) and fan blade securing cap (7) from the motor & housing assembly (A).
2. Position the rear guard (4) firmly to the motor & housing assembly (A) and fasten by turning the rear guard securing ring (5) clockwise tightly.
3. Push the fan blade (6) along the motor shaft.
4. Fasten securely using the fan blade securing anticlockwise or fix the fan blade on motor shaft with securing screw.
5. Attach the front guard (8).
6. Fix the two guard by guard ring with screw or position fixer (9).

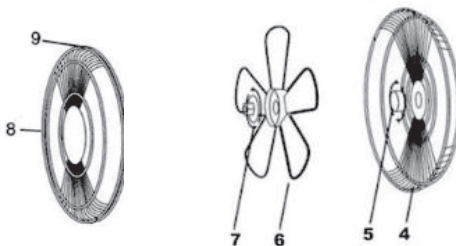

Operating Instruction

Operating

1. Plug the cord into a suitable 220-240V AC outlet.
2. Turn the fan on by pressing the ON button on the remote control or on the control panel. (see fig. 3/4).
The appropriate LED light on the front of the fan will illuminate. Turn the fan Off by pressing the OFF button. Pressing the OFF button will automatically clear all settings and reset the fan.
3. The speed can be adjusted by repeatedly pressing the speed button on the remote control or the control panel to select Low, Medium, or High speed.
4. Natural breeze movement / Sleep control
For a natural breeze movement, push the Breeze button MODE on the remote control once. This will automatically vary the fan speeds faster and slower.
Push the MODE button on the remote control again to activate the sleep control. This function slows the fan speed down and when used in conjunction with the timer settings will gradually slow the fan down and switch off. e.g. SLEEP + 4hrs TIMER programme the fan to gradually slow down over the 4 hours and eventually turn off.
Push the MODE button on the remote control a three time to switch off the BREEZE and SLEEP functions. The appropriate LED light on the front of the fan will illuminate when the Breeze function is selected.
5. To start and stop oscillation of the fan head, push the Oscillation button on the remote control or on the control panel.
6. To start and stop the timer, press the Timer button on the remote control to cycle through the timer settings. The appropriate LED light on the front of the fan will illuminate.(see fig 3 and 4)

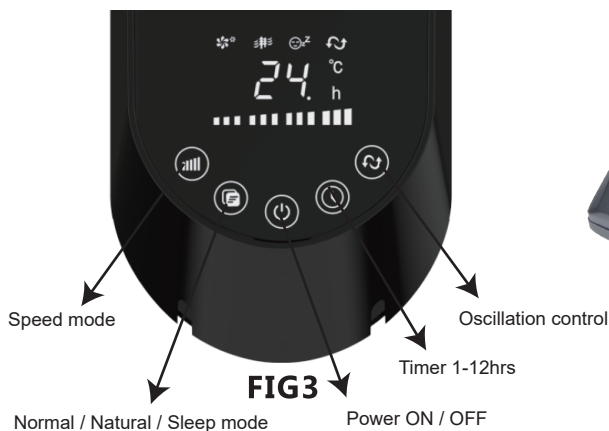


FIG4

Important:

Remote Control

The Remote Control requires 2 AAA batteries (not supplied) for operation.

To install the batteries, simply depress the back of the remote, with your thumb in the indentations, and remove the cover. Insert the batteries according to the diagram shown inside. Replace the cover.

Cleaning And Maintenance

Follow these instructions to correctly and safely care for your fan. Please remember:

- Always unplug the fan before cleaning or assembly.
- Do not allow water to drip on or into the fan motor housing.
- Be sure to use a soft cloth, moistened with a mild soap solution.
- Do not use any of the following as a cleaner, petrol, thinners or benzene.

Fan storage

Your fan can be stored either partially disassembled or assembled. It is important to keep it in a safe, dry location. If stored disassembled, we recommend using the original (or appropriately sized) box.

Important Safeguards

When using electrical appliances, basic safety precautions should always be taken including the following:

- Use the fan only for purposes described in the instruction manual.
 - To protect against electrical shock, do not immerse the fan, plug or cord in water or any other liquid or spray with liquids.
 - Unplug from the electrical outlet when not in use, when moving the fan from one location to another, before putting on or taking off parts and before clearing.
 - Avoid contact with any moving parts.
 - Do not operate any appliance, with a damaged cord plug after the appliance malfunctions, or has been dropped/damaged in any manner.
 - The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
 - Do not use outdoors.
 - To disconnect from the electrical supply, grip the plug and pull out from the wall outlet. DO NOT pull on the cord.
 - That the fan is to be installed so that the blades are more than 2.3m above the floor.
- Do not use the fan before assembly.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.