

CEILING FAN

INSTALLATION MANUAL



Thank you for purchasing our product. Before operating this set, please ensure that you have read the instructions thoroughly.



Use only with the rated voltage of 220-240V, 50~60Hz.




To ensure safety during cleaning or maintenance tasks, please switch off the power supply, wait until the blade comes to a complete stop before proceeding with any cleaning or maintenance tasks.



This product is not intended for use by individuals, including children, who have reduced physical, sensory, or mental capabilities or lack the necessary experience and knowledge, unless they are under proper supervision or instruction. It is important to supervise children to ensure that they do not play with the product.

Supplied parts

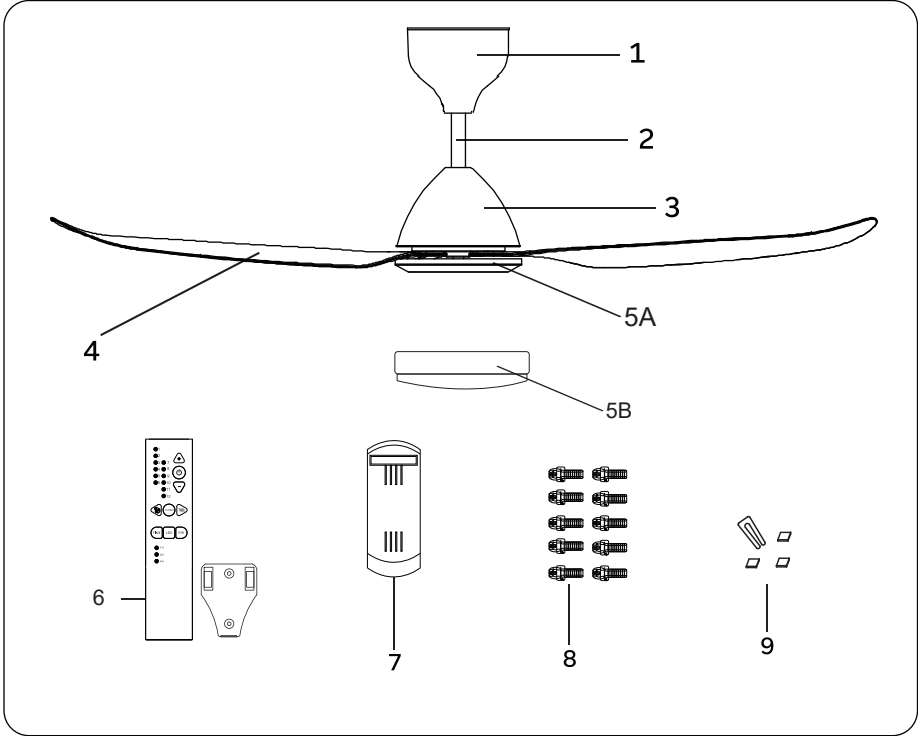


Item	Parts	QTY
1	Upper Canopy	1 Set
2	Suspension Rod	1 Set
3	Lower Canopy	1 Set
4	Fan Blade	5 Pcs
5A	Decorative Cover	1 Set
5B	Light Cover (For light model)	1 Set
6	Remote Control	1 Set
7	Receiver Unit	1 Set
8	Screw Pack	1 Set
9	Balancing kit	1 Set

How To Install The Fan

The following steps will guide you to a successful installation

1. Install fan blades.
2. Fan assemble parts.
3. Install the fan body.
4. Install the safety cable.
5. Connecting the power supply (Non LED model).
6. Connecting the power supply (LED model).
7. Install the canopy.
8. Install the housing (Non LED model).
9. Install the housing (LED model).
10. Install the remote control holder.
11. How to use the remote control.
12. Remote control coverage.
13. How to use the balancing kit.

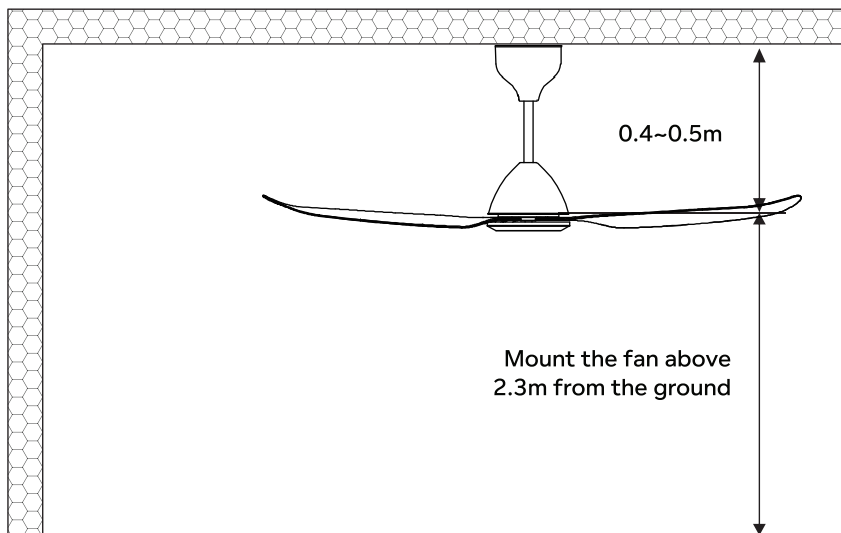


WARNING

The ceiling fan should be mounted at a height of at least 2.3 meters from the floor to ensure proper airflow and safety.


Install Fan Blades

Install and tighten the blades with screws provided. Make sure to tighten them securely to ensure the blades are properly attached.

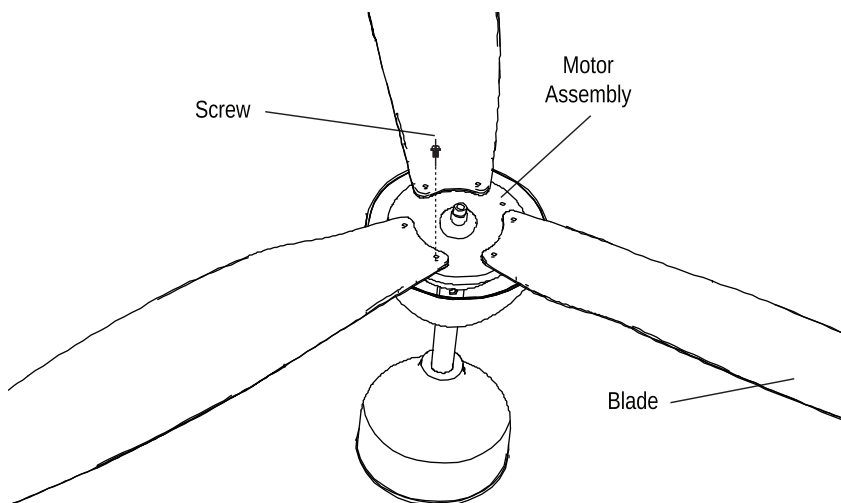

Fan Assemble Parts

Note: Downrod has been fully tighten to the Motor Shaft
(Bolt tightening torque is 250-300N*cm)

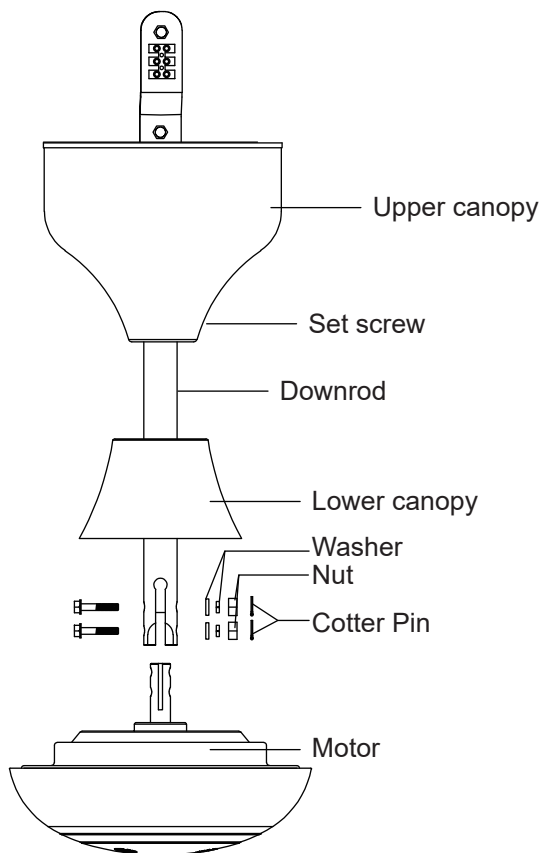


Install The Fan Body

1. Remove the supplied bolt, washer, nut, pulley and cotter pin from the top portion of the downrod.



WARNING

This bolt must be firmly tightened

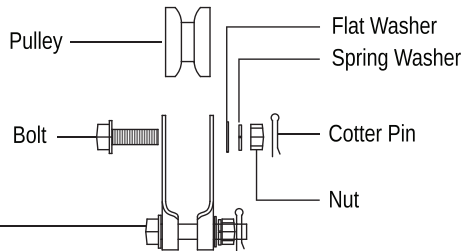


2. Place the pulley onto the hook.



WARNING

The hook can only support a maximum weight of 10 times the weight of the ceiling fan

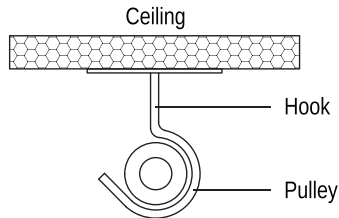


3. Fix and firmly tighten the previous bolt, washer, nut, and cotter pin.



WARNING

Cotter Pin must be inserted into the bolt

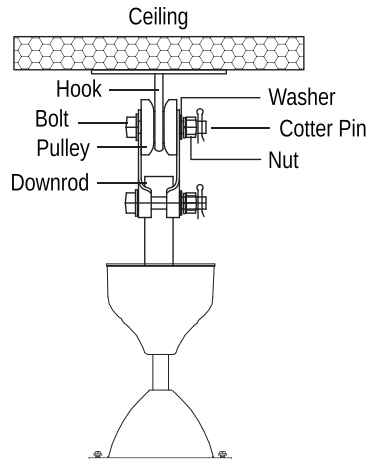

Install The Safety Cable

1. Remove the safety cable screw from the downrod.
2. Loop the safety cable as shown in Figure 2 below.
3. Tighten back the screw at the downrod and make sure the screw is securely fixed.



WARNING

Secure the Safety Cable to prevent injury in case the ceiling fan drops.


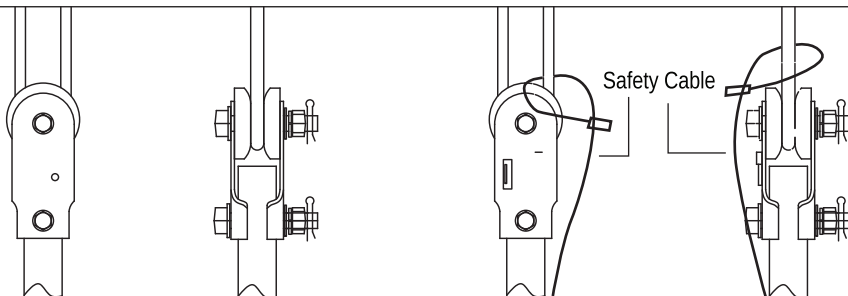


Figure 2

Connecting The Power Supply (Non LED model)

Only direct connection to the wall allowed.
Please refer to the figure below.

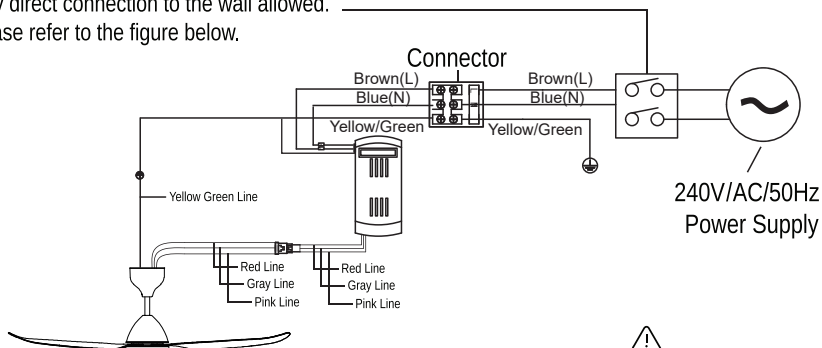

Ceiling Fan




WARNING

Qualified personnel must handle the connection or replacement of the power cord with a wire thickness of 1mm² or above to prevent hazards.

Connecting The Power Supply (LED model)

Only direct connection to the wall allowed.
Please refer to the figure below.

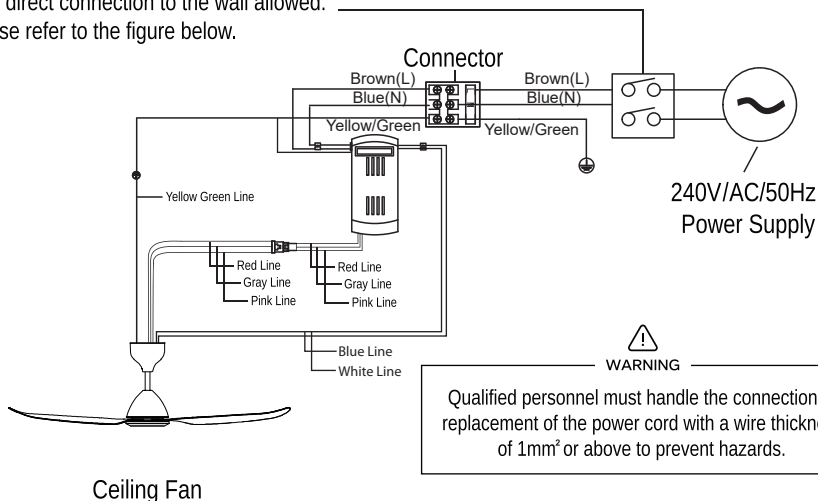


Install The Canopy

Lift the upper canopy and securely tighten it using the set screw. Make sure that the upper canopy is positioned 3mm away from the ceiling.



WARNING


Ensure that the Upper Canopy is positioned at a distance greater than 3mm from the ceiling.

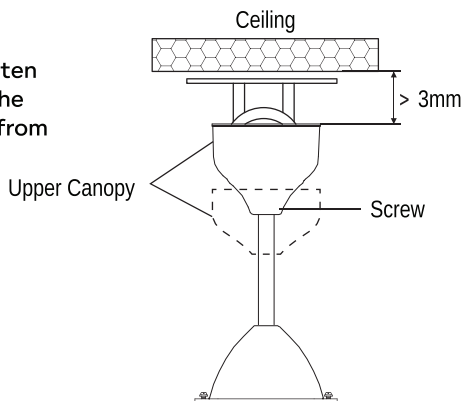

Install The Housing (Non LED model)

Gently place the decorative cover onto the motor shaft and turn clockwise to secure the cover.

Stop when the cover cannot be turned anymore to avoid overtightening it.

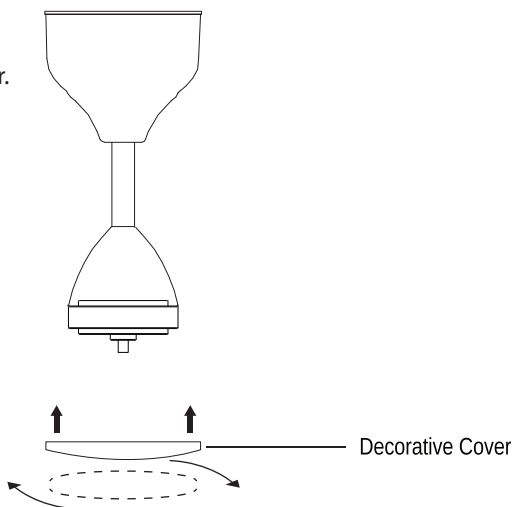


Install The Housing (LED model)


Step1: Remove screws from the triangle plate.

Step2: Connect the light cable to the LED.

Step3: Fasten the LED with screws, then rotate the light cover clockwise .

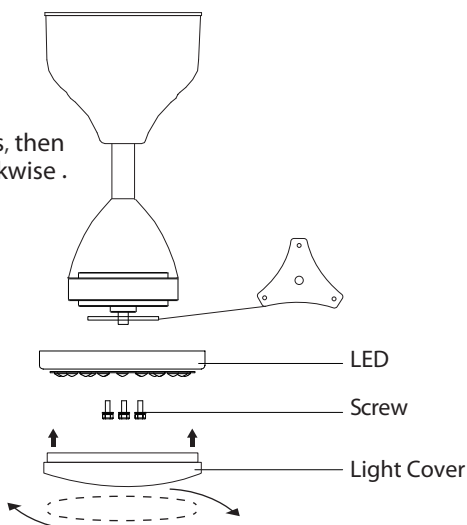

Install The Remote Control Holder

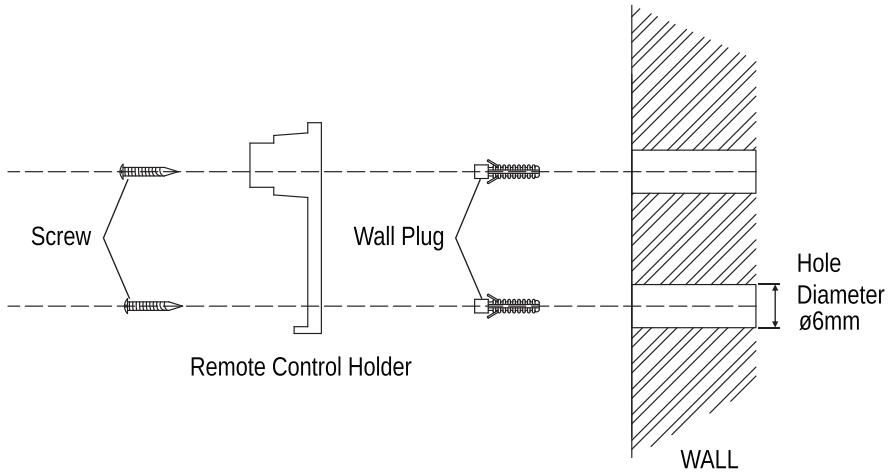

How To Use The Remote Control

ON/OFF BUTTON

Turn ON/OFF ceiling fan.

SPEED BUTTONS

Press the SPEED button to turn on the fan and cycle through the speeds in the sequence: (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12.) *The fan will automatically resume operation at the last speed setting used before it was powered off.

F/R BUTTON

Set up the ceiling fan to either forward or reverse mode.

NL.WIND BUTTON *Natural Wind*

This function simulates the effect of a natural breeze. The fan will automatically increase its speed from speed 1 to turbo every 8 seconds, and then decreases back from speed turbo to speed 1.

SLEEP WIND BUTTON

Turn ON/OFF the sleep wind mode (Speed 1).

TIMER BUTTON


Set the desired duration at 1/2/4/Hrs.

TURBO BUTTON

Turn on turbo mode for maximum fan speed(12).

LED BUTTON

Turn ON/OFF the light (For Led model).

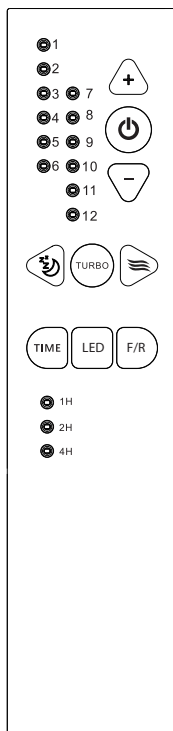


STEPS FOR CODE MATCHING

1. Pairing Method : Switch on the fan, press the () for up to 20 seconds until you hear a "beep" indicating a successful code matching. If the code does not match successfully, turn off the power and wait for 1 minute before repeating the above operation.

2. If the remote control is not functioning properly, check the battery first. Remove the battery if the remote control will not be used for an extended period of time.

Remote Control Coverage

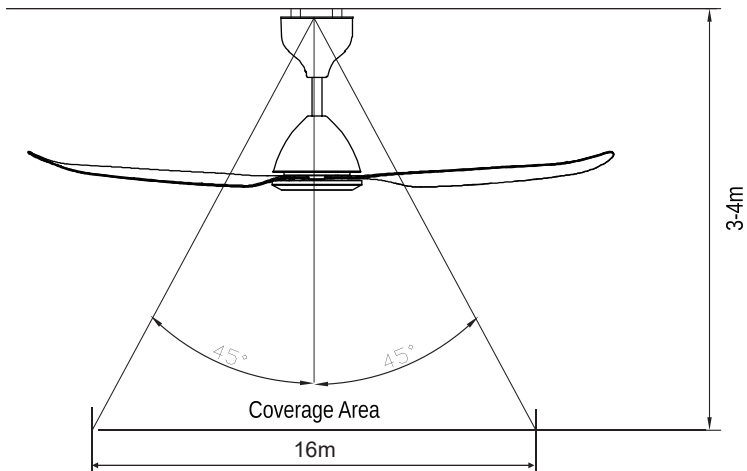


The figure shows the best coverage. The ideal ceiling height is 3-4m.

How to Use The Balancing Kit

If the fan experiences wobbling during operation, follow these steps to resolve the issue.

1. Tighten all screws.
2. Remove and reattach the blades in different positions on the motor.
3. Measure the distance between the ceiling and each blade.
4. If the fan continues to wobble, utilize the provided blade balancing kit.

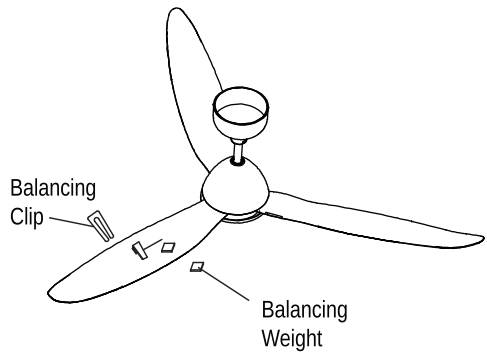

Maintenance

To maintain proper and safe usage, it is highly recommended to inspect and tighten all connections every 6 months. Due to the natural movement of the fan, connections may become loose over time, and regular inspection helps ensure their stability.

CLEANING

To maintain its new appearance, it is important to clean your fan periodically. Follow these basic cleaning procedures:

1. Only use lukewarm water; avoid detergents, corrosive, or acidic solutions.
2. Dampen a soft or lint-free cloth lightly for cleaning. Rough fabrics can scratch the surface.
3. To protect and enhance the appearance of wooden blades, apply a thin coat of furniture polish.
4. For small scratches, apply a light coat of shoe polish to cover them.

Troubleshooting

Check on the following before lodging a service report.

PROBLEM	CAUSE	SOLUTION
Fan not moving	1. Main cables not connected 2. Wire connection loose	1. Check the line wire connections to the fan and switch housing.
Fan noisy	1. Housing screws are loose 2. Wire and nut connections are rattling against each other 3. Canopy is touching the ceiling	1. Tighten all screws. 2. When storing, neatly separate the wire connections from the nut. 3. Check the canopy's proximity to the ceiling is not too close or touching.
Remote Control not working	1. Remote and receiver code different 2. Battery not installed 3. Weak battery	1. Refer page 10 repairing the remote. 2. Install the Battery. 3. Replace the battery.

Customer Service Centre

If you need any technical assistance or to report a fault, please contact our customer service center at:

DEKA MARKETING SDN BHD

200901029313 (872418-P)

NO. 7, JALAN UDANG HARIMAU 1,
MEDAN NIAGA KEPONG,
51200 KUALA LUMPUR,
MALAYSIA.

TEL: 603-62426166 (HUNTING LINE)

FAX: 603-62424822

CARELINE : 603-6242 1600 (HUNTING LINE)



WARNING

It is not recommended to install ceiling fans directly above heating areas such as stoves, ovens, hot plates, and similar locations. Direct exposure to heat and cooking oils can significantly reduce the lifespan of the fan.

SPECIFICATIONS

Model	Voltage	Fan Wattage	Lighting Wattage	Size Of Fan
F3 DC	220-240V, 50~60Hz	40W	—	1420mm
F3 DC-L	220-240V, 50~60Hz	40W	22W	1420mm

